



创新玩具
CREATE TOYS
ITEM NO.2010B 2.4G

 
Top Racing Second Generation




(Operating instruction)

Please read the instructions carefully before using.
Please take care of the instructions for necessary at a later date.

Contents



Mini racer x1

 

Transmitter x1




Instruction sheet x1




Road-block x4

Part details

● Transmitter

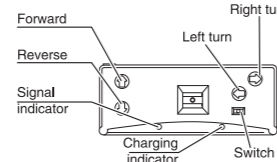


● Mini racer

 


Preparation

 
1. Open the can, detach the can cover and can body. Push the LOCK inside the can cover towards the direction shown to release the 4 road-block.



 
2. Take out the transmitter and car from the can body. Slide the car by the direction shown in the picture, take it out.



3. Use a Phillips screwdriver to loosen the screw counterclockwise and open the battery cover on the back of the remote control in the direction of the arrow.

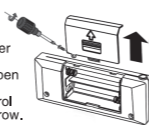

 4. Insert 2 x AA batteries with the correct polarity, then replace the battery cover, tighten the screws.



Operation

1. After installing the battery on the remote control, turn on the switch and the frequency light flashes. After the car turned on, the remote control frequency light will go out, indicating that the frequency matched successfully. If the light flashes, it means the frequency matched unsuccessfully.


2. Function of transmitter button:

(1). After the remote control button is pressed, the frequency light will light up and the car will act accordingly.

(2). When the forward/backward button pressed, the engineering vehicle can move forward/backward.

(3). When you press the forward/backward button and press the left/right turn button at the same time, the engineering vehicle can turn forward/backward and turn left/right.

3. Adjust the trimmer at the front of bottom of the engineering vehicle to adjust the straight-line driving performance of the engineering vehicle.

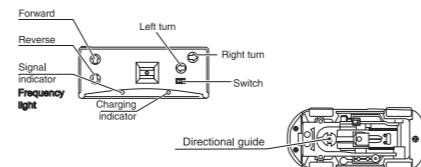


Charging the mini racer

1. Open the charger cover as illustrated and take out the CHARGING PLUG.

2. Insert the CHARGING PLUG to the CHARGING JACK on the bottom of the mini racer, the CHARGING INDICATOR lights up indicate the charging is in process. Make sure the power switch of the car is turned off. It is normal for the frequency lamp to flash when charging.

 When charging, the charging head should be recognized the direction, and remember to turn off the switch when not in use.
3. The mini racer is fully charged when the CHARGING INDICATOR goes off. Charging time: 3-4 minutes.



Cautions:

- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type are recommended to be used.
- Exhausted batteries should be removed from the product.
- Do not dispose batteries in fire, or batteries will explode or leak.
- The supply terminals are not to be short-circuited.
- Batteries are to be inserted with the correct polarity.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before being charged (if removable).
- Remove batteries if the product is not to be used for an extended period.
- The packaging has to be kept since it contains important information.



创新玩具
CREATE TOYS
ITEM NO.2010B 2.4G

Top Racing Second Generation




(使用说明书)

请在使用前详细阅读本使用说明书
请妥善保管本说明书以备不时之用。

套装内容



 
赛车x1



遥控器x1





 说明书x1




路障x4

各部件名称

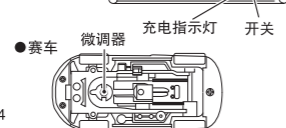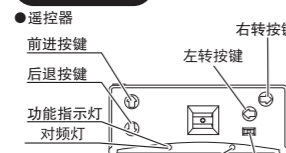


准备

 
1. 打开包装罐，翻转包装罐盖，按箭头方向推开卡扣，取出4个路障。



 
2. 从包装罐中，取出遥控器和赛车，然后向右拖动，取出赛车。



 3. 用十字刀螺丝逆时针拧开螺丝，按箭头方向打开遥控器背后的电池盖。



 4. 按正确极性装入2粒“AA”电池，盖上电池盖，拧紧螺丝。






操作

1. 遥控器装上电池后，打开开关，对频灯闪烁，车子打开开关后遥控器对频灯灭，表示已对频成功，如对频灯闪烁表示对频不成功。

2. 遥控器按键的功能：

- (1). 遥控器按键按下后，对频灯亮，车子有对应动作。
(2). 当按前进/后退按键时，遥控车可前进/后退。
(3). 当按前进/后退按键，同时按住左转/右转按键时，遥控车可前进左右转/后退左右转。

   3. 调整赛车底部前端的微调器，可调整赛车的直线行驶性能。






充电

1. 如图，打开遥控器旁边充电盖，取出充电插头。

2. 确保汽车的电源开关已关闭，将充电插头插进彻底的充电接口，充电指示灯亮，表示充电进行中。充电时充电插头对频灯闪烁是正常的。充电时充电头要认准方向，不用时记得关闭开关。

   3. 当充电指示灯熄灭，表示充电完成。充电时间：3-4分钟。



注意：

- 玩具车本身使用1.2V 1/3AAA NI-MH 可充电内置电池，遥控器使用2节1.5V AA电池；
- 安装或更换电池时请注意极性；
- 非充电电池不可充电；
- 当给充电电池充电时，需要成人监护；
- 充电电池在充电前应从玩具中取出；
- 不可使用新旧或不同类型的电池；

- 从玩具内取出用尽的电池；
- 电源端子不应短路。
- 本赛车因配有强大动力，高速行驶时，由于惯性原因，不能急刹车，请使用时特别注意。
- 当赛车车速减慢时，说明车体电量不足。请将赛车按以上方法充电即可。

- 如遥控器电池电量不足，赛车充不进电，充电指示灯变暗或不亮，更换新电池即可。
- 充电时请认准充电插头和充电接口。
- 长时间不使用时，请取出遥控器内的电池，并将赛车的电源开关拨至“OFF”位置。
- 拆包装时在成人的指导下进行。
- 保留本资料以供日后参考。